



PLAN & DESIGN

Plan your installation, measure, and mark the path on the ground where you are going to place the fence, indicating with an X the place of each post.

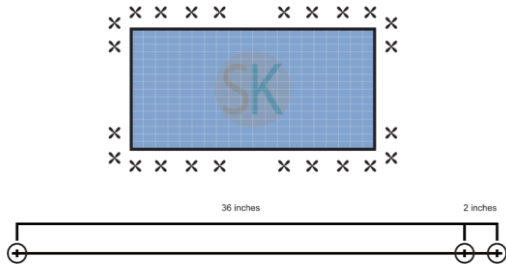

STAKEOUT

Leave less than 1m (from the centre of the posts) between the posts of the same section and 6cm between the last post of one section and the first post of the next. (be guided by the rule we send you) To install an angle it is necessary to match the end of the section and the beginning of another, so in each corner we will always have 2 posts.

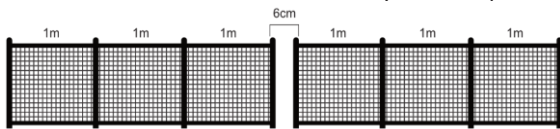

DRILL

Once you have everything ready start drilling. Tilt the end posts of each section slightly outward for perfect tension.




FILLING

Fill each hole with resin or chemical anchor, place the plastic anchors and let them dry.




MOUNTING

Mount the fence section by section making sure that everything fits together correctly.

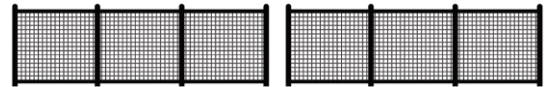


SECURITY LOCKS/LACHES

Attach the safety latches to join the sections using the hole let by the second screw at the top.

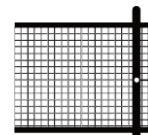

TENSION


If necessary, adjust the fence tension by correcting the mesh length of each section: Remove the screws that hold the post bracket and remove it. Cut off the excess part of the mesh, make a fold at the end and screw the plate back on.

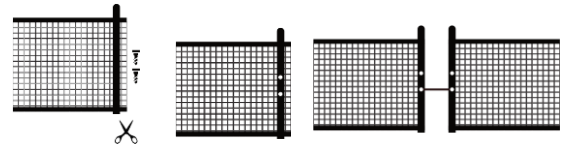

ACCESS / DOORS

Access the pool through a meeting point between two sections: bring the two posts closer together and open the safety latch.

Each beginning and end of the section is an access to the pool, you can install it where it suits you.

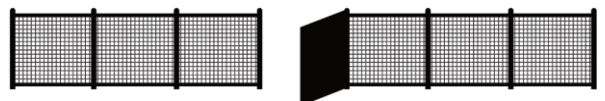

SafetyKids Fences are not a substitute for adult supervision. Children must be supervised all times